

Гидропанели ARON BM.5

Технические характеристики

Архангельск (8182)63-90-72	Ижевск (3412)26-03-58	Магнитогорск (3519)55-03-13	Пермь (342)205-81-47	Сургут (3462)77-98-35
Астана (7172)727-132	Иркутск (395)279-98-46	Москва (495)268-04-70	Ростов-на-Дону (863)308-18-15	Тверь (4822)63-31-35
Астрахань (8512)99-46-04	Казань (843)206-01-48	Мурманск (8152)59-64-93	Рязань (4912)46-61-64	Томск (3822)98-41-53
Барнаул (3852)73-04-60	Калининград (4012)72-03-81	Набережные Челны (8552)20-53-41	Самара (846)206-03-16	Тула (4872)74-02-29
Белгород (4722)40-23-64	Калуга (4842)92-23-67	Нижний Новгород (831)429-08-12	Санкт-Петербург (812)309-46-40	Тюмень (3452)66-21-18
Брянск (4832)59-03-52	Кемерово (3842)65-04-62	Новокузнецк (3843)20-46-81	Саратов (845)249-38-78	Ульяновск (8422)24-23-59
Владивосток (423)249-28-31	Киров (8332)68-02-04	Новосибирск (383)227-86-73	Севастополь (8692)22-31-93	Уфа (347)229-48-12
Волгоград (844)278-03-48	Краснодар (861)203-40-90	Омск (3812)21-46-40	Симферополь (3652)67-13-56	Хабаровск (4212)92-98-04
Вологда (8172)26-41-59	Красноярск (391)204-63-61	Орел (4862)44-53-42	Смоленск (4812)29-41-54	Челябинск (351)202-03-61
Воронеж (473)204-51-73	Курск (4712)77-13-04	Оренбург (3532)37-68-04	Сочи (862)225-72-31	Череповец (8202)49-02-64
Екатеринбург (343)384-55-89	Липецк (4742)52-20-81	Пенза (8412)22-31-16	Ставрополь (8652)20-65-13	Ярославль (4852)69-52-93
Иваново (4932)77-34-06	Киргизия (996)312-96-26-47	Казахстан (772)734-952-31	Таджикистан (992)427-82-92-69	

Единый адрес для всех регионов: any@nt-rt.ru || www.aron.nt-rt.ru

BM.5... MULTI STATION SUBPLATES

BM.5.**...

BM

Multi station subplate (standard versions are supplied in cast iron material)

5

CETOP 5/NG10

50 = Connected in parallel with pressure relief valve and rear connectors

60 = Connected in parallel without pressure relief valve and side connectors

70 = Connected in parallel with pressure relief valve and 3/4" BSP P/T connectors and 1/2" BSP side A/B

80 = Connected in parallel with pressure relief valve and 1" BSP P/T connectors and 3/4" BSP side A/B

No. of valves seats (for BM.5.80... max 6))

2 / 3 / 4 / 5 / 6 / 7 / 8

Type of adjustment (omit for 60 version)

M = Plastic knob

C = Grub screw

Setting range (omit for 60 version)

1 = max. 50 bar (**white spring**)

2 = max. 140 bar (**yellow spring**)

3 = max. 350 bar (**green spring**)

00 = No variant


AL = in aluminium material (only for BM560 and BM570 versions)

1





Serial No.

• The minimum permissible setting pressure is the same for all spring:
see cartridge valve type CMP.30...

BM.5.50 CONNECTED IN PARALLEL WITH PRESSURE RELIEF VALVE

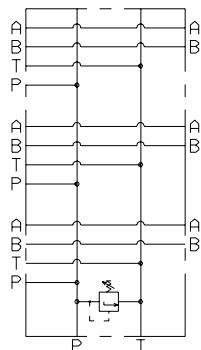

Type	A	B	Weight (Kg)
BM.5.50/2	216	200	8,5
BM.5.50/3	291	275	11,3
BM.5.50/4	366	350	14
BM.5.50/5	441	425	16,8
BM.5.50/6	516	500	19,5
BM.5.50/7	591	575	22,3
BM.5.50/8	666	650	25

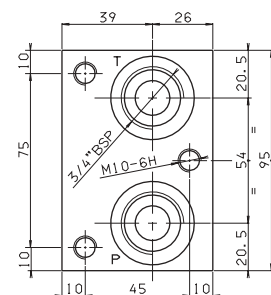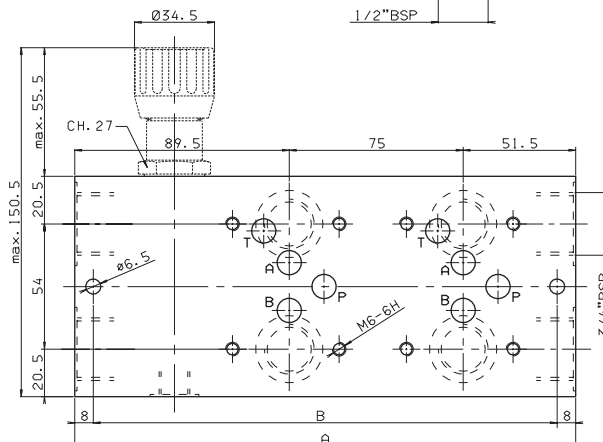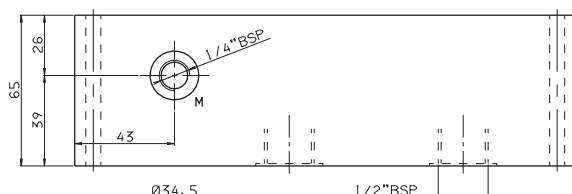
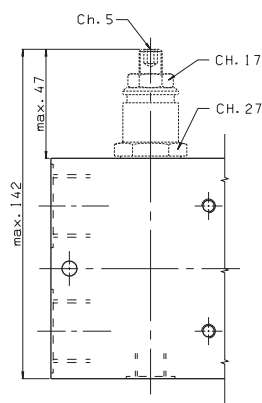


Fixing screws M6x75 UNI 5931


BM.5... MULTI STATION SUBPLATES

BM.5.60 CONNECTED IN PARALLEL WITHOUT PRESSURE RELIEF VALVE

Type	A	B	Weight (Kg)
BM.5.60/2	175	159	10
BM.5.60/3	250	234	14,2
BM.5.60/4	325	309	18,4
BM.5.60/5	400	384	22,6
BM.5.60/6	475	459	26,8
BM.5.60/7	550	534	31
BM.5.60/8	625	609	35,2


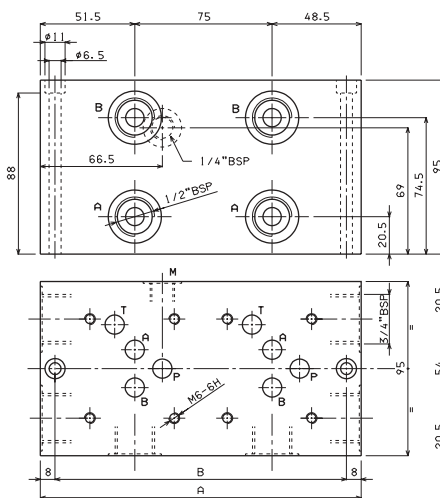
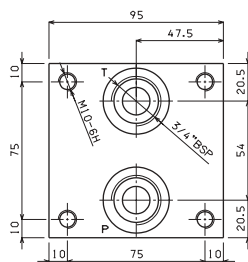


Fixing screws M6x100 UNI 5931

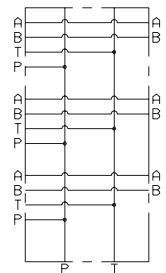


BM.5.70 CONNECTED IN PARALLEL WITH PRESSURE RELIEF VALVE

Type	A	B	Weight (Kg)
BM.5.70/2	216	200	12,7
BM.5.70/3	291	275	16,8
BM.5.70/4	366	350	21
BM.5.70/5	441	425	25,2
BM.5.70/6	516	500	29,5
BM.5.70/7	591	575	33,6
BM.5.70/8	666	650	37,8

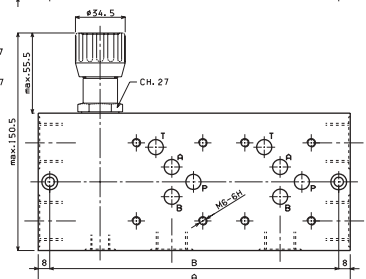
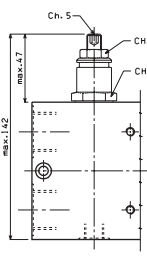
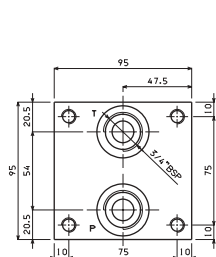


Fixing screws M6x100 UNI 5931

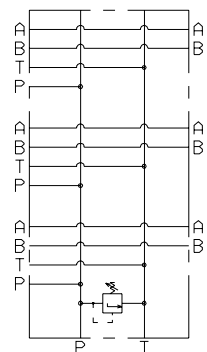


BM.5.80 CONNECTED IN PARALLEL WITH PRESSURE RELIEF VALVE

Type	A	B	Weight (Kg)
BM.5.80/2	225	205	19,5
BM.5.80/3	300	280	26
BM.5.80/4	375	355	32,5
BM.5.80/5	450	430	39
BM.5.80/6	525	505	45,5

 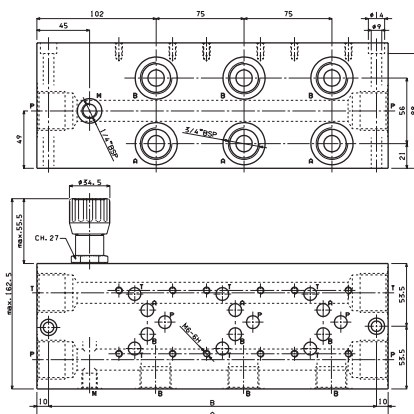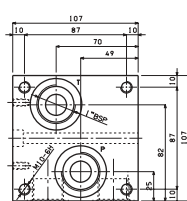

Fixing screws M8x110 UNI 5931

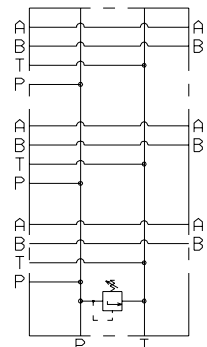

Архангельск (8182)63-90-72	Ижевск (3412)26-03-58	Магнитогорск (3519)55-03-13	Пермь (342)205-81-47	Сургут (3462)77-98-35
Астана (7172)727-132	Иркутск (395)279-98-46	Москва (495)268-04-70	Ростов-на-Дону (863)308-18-15	Тверь (4822)63-31-35
Астрахань (8512)99-46-04	Казань (843)206-01-48	Мурманск (8152)59-64-93	Рязань (4912)46-61-64	Томск (3822)98-41-53
Барнаул (3852)73-04-60	Калининград (4012)72-03-81	Набережные Челны (8552)20-53-41	Самара (846)206-03-16	Тула (4872)74-02-29
Белгород (4722)40-23-64	Калуга (4842)92-23-67	Нижний Новгород (831)429-08-12	Санкт-Петербург (812)309-46-40	Тюмень (3452)66-21-18
Брянск (4832)59-03-52	Кемерово (3842)65-04-62	Новокузнецк (3843)20-46-81	Саратов (845)249-38-78	Ульяновск (8422)24-23-59
Владивосток (423)249-28-31	Киров (8332)68-02-04	Новосибирск (383)227-86-73	Севастополь (8692)22-31-93	Уфа (347)229-48-12
Волгоград (844)278-03-48	Краснодар (861)203-40-90	Омск (3812)21-46-40	Симферополь (3652)67-13-56	Хабаровск (4212)92-98-04
Вологда (8172)26-41-59	Красноярск (391)204-63-61	Орел (4862)44-53-42	Смоленск (4812)29-41-54	Челябинск (351)202-03-61
Воронеж (473)204-51-73	Курск (4712)77-13-04	Оренбург (3532)37-68-04	Сочи (862)225-72-31	Череповец (8202)49-02-64
Екатеринбург (343)384-55-89	Липецк (4742)52-20-81	Пенза (8412)22-31-16	Ставрополь (8652)20-65-13	Ярославль (4852)69-52-93
Иваново (4932)77-34-06	Киргизия (996)312-96-26-47	Казахстан (772)734-952-31	Таджикистан (992)427-82-92-69	