

Гидропанели ARON BS.2

Технические характеристики

Архангельск (8182)63-90-72	Ижевск (3412)26-03-58	Магнитогорск (3519)55-03-13	Пермь (342)205-81-47	Сургут (3462)77-98-35
Астана (7172)727-132	Иркутск (395)279-98-46	Москва (495)268-04-70	Ростов-на-Дону (863)308-18-15	Тверь (4822)63-31-35
Астрахань (8512)99-46-04	Казань (843)206-01-48	Мурманск (8152)59-64-93	Рязань (4912)46-61-64	Томск (3822)98-41-53
Барнаул (3852)73-04-60	Калининград (4012)72-03-81	Набережные Челны (8552)20-53-41	Самара (846)206-03-16	Тула (4872)74-02-29
Белгород (4722)40-23-64	Калуга (4842)92-23-67	Нижний Новгород (831)429-08-12	Санкт-Петербург (812)309-46-40	Тюмень (3452)66-21-18
Брянск (4832)59-03-52	Кемерово (3842)65-04-62	Новокузнецк (3843)20-46-81	Саратов (845)249-38-78	Ульяновск (8422)24-23-59
Владивосток (423)249-28-31	Киров (8332)68-02-04	Новосибирск (383)227-86-73	Севастополь (8692)22-31-93	Уфа (347)229-48-12
Волгоград (844)278-03-48	Краснодар (861)203-40-90	Омск (3812)21-46-40	Симферополь (3652)67-13-56	Хабаровск (4212)92-98-04
Вологда (8172)26-41-59	Красноярск (391)204-63-61	Орел (4862)44-53-42	Смоленск (4812)29-41-54	Челябинск (351)202-03-61
Воронеж (473)204-51-73	Курск (4712)77-13-04	Оренбург (3532)37-68-04	Сочи (862)225-72-31	Череповец (8202)49-02-64
Екатеринбург (343)384-55-89	Липецк (4742)52-20-81	Пенза (8412)22-31-16	Ставрополь (8652)20-65-13	Ярославль (4852)69-52-93
Иваново (4932)77-34-06	Киргизия (996)312-96-26-47	Казахстан (772)734-952-31	Таджикистан (992)427-82-92-69	

Единый адрес для всех регионов: any@nt-rt.ru || www.aron.nt-rt.ru



BS.2... SINGLE STATION SUBPLATE

BS.2.**...

BS

Single subplate (blanking)

2

CETOP 2/NG4

02 / 03 / 04 / 05 / 07

00







No variant

1

Serial No.

Weight: 0,09 Kg

Fixing screws
M5x25 UNI 5931

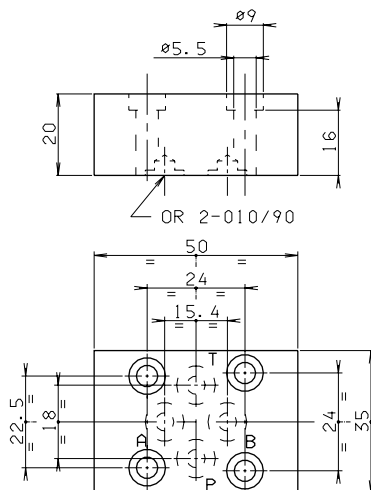

CETOP 2 SUBPLATES

BS.2.**... / BS.2.12...

BS.2.14... CH. VII PAGE 2

BS.2.16... / BS.2.20...

BS.3.2... CH. VII PAGE 3

BC.2.50.AB... / BC.2.50.PT...

BC.2.51... CH. VII PAGE 4

BM.2.**... / BM.2.60...

CH. VII PAGE 5

BM.2.50... / BM.2.70...

CH. VII PAGE 6

CMP.02...

CH. V PAGE 17

BS.2.12 (REAR CONNECTORS)

BS

Single subplate

2

CETOP 2/NG4

12

1/4" BSP
rear connectors

00


No variant

1

Serial No.

Weight: 0,3 Kg

Fixing screws M5x35 UNI 5931

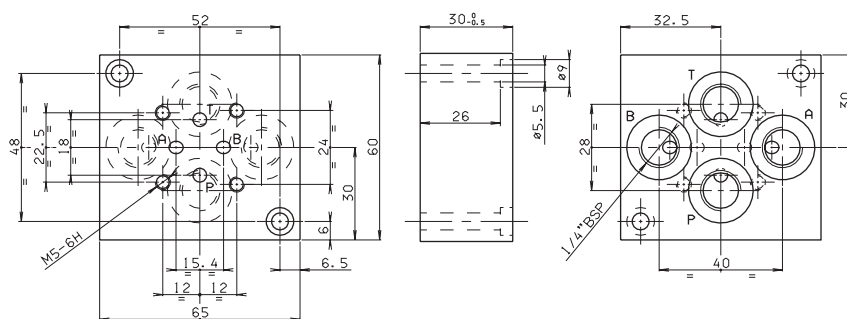

BS.2.14 (SIDE CONNECTORS)

BS

Single subplate

2

CETOP 2/NG4

14

1/4" BSP
side connectors

00



No variant

1

Serial No.

Weight: 0,3 Kg

Fixing screws M5x35 UNI 5931

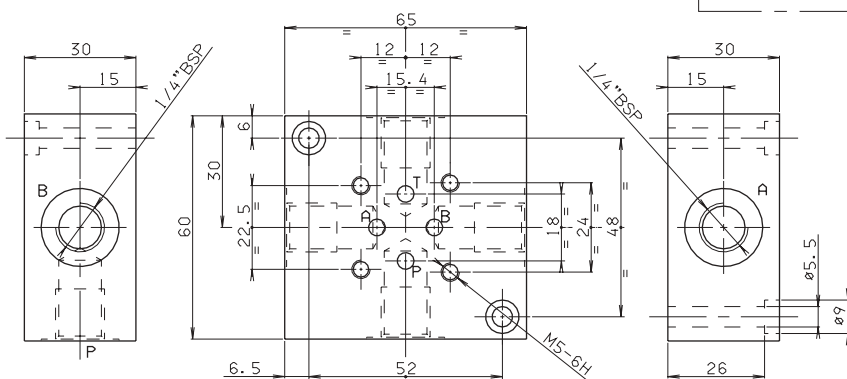


BS.2... SINGLE STATION SUBPLATE

BS.2.16 (CONNECTORS SIDE A AND B, REAR P AND T)

BS	Single subplate
2	CETOP 2/NG4
16	1/4" BSP rear and side connectors
00	No variant
1	Serial No.

Weight: 0,3 Kg

Fixing screws M5x35 UNI 5931

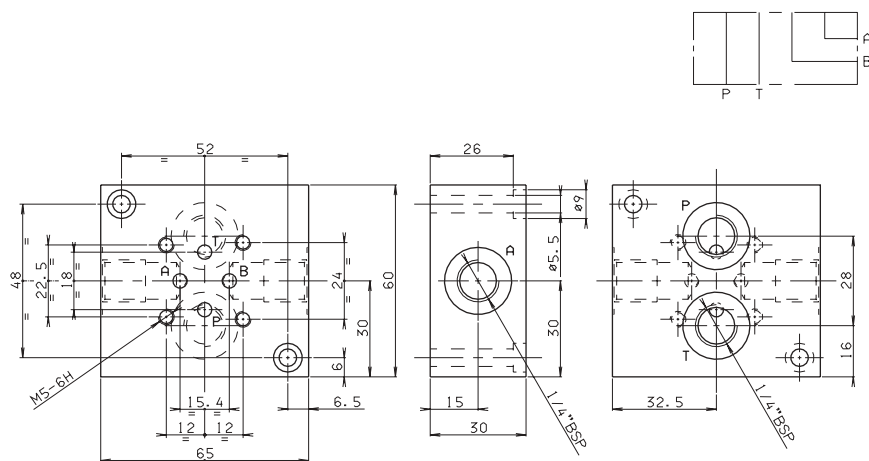


BS.2.20 (CONNECTORS SIDE A AND B, REAR P AND T)

BS	Single subplate
2	CETOP 2/NG4
20	1/4" BSP rear and side connectors
C	Type of adjustment grub screws
*	Setting ranges 1 = max. 30 bar (white spring) 2 = max. 90 bar (yellow spring) 3 = max. 180 bar (green spring) 4 = max. 250 bar (orange spring)
**	00 = No variant V1 = Viton
1	Serial No.

Weight: 0,45 Kg

Fixing screws M5x50 UNI 5931

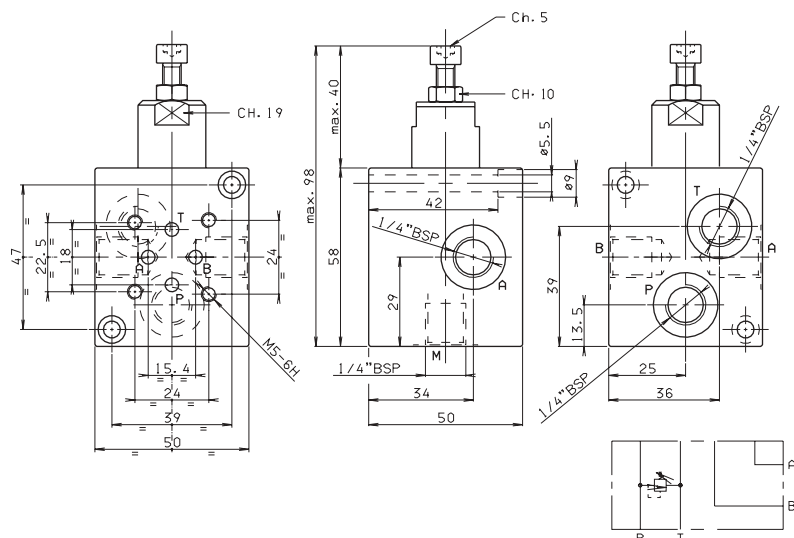


- The minimum permissible setting pressure depending on the spring:
see cartridge valve type CMP.02...

BS.3.2 (REDUCTION PLATE FROM CETOP 3/NG6 TO CETOP 2/NG4)

BS	Single subplate
3	CETOP 3/NG6
2	CETOP 2/NG4
00	No variant
1	Serial No.

Weight: 0,12 Kg

Fixing screws M5x20 UNI 5931

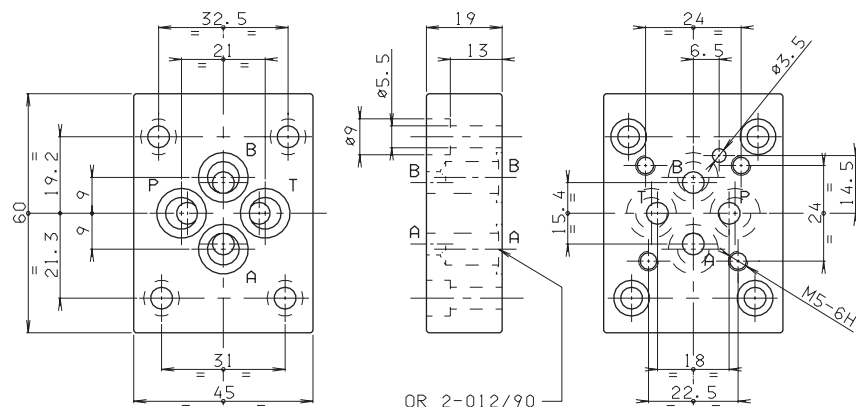

Архангельск (8182)63-90-72	Ижевск (3412)26-03-58	Магнитогорск (3519)55-03-13	Пермь (342)205-81-47	Сургут (3462)77-98-35
Астана (7172)727-132	Иркутск (395)279-98-46	Москва (495)268-04-70	Ростов-на-Дону (863)308-18-15	Тверь (4822)63-31-35
Астрахань (8512)99-46-04	Казань (843)206-01-48	Мурманск (8152)59-64-93	Рязань (4912)46-61-64	Томск (3822)98-41-53
Барнаул (3852)73-04-60	Калининград (4012)72-03-81	Набережные Челны (8552)20-53-41	Самара (846)206-03-16	Тула (4872)74-02-29
Белгород (4722)40-23-64	Калуга (4842)92-23-67	Нижний Новгород (831)429-08-12	Санкт-Петербург (812)309-46-40	Тюмень (3452)66-21-18
Брянск (4832)59-03-52	Кемерово (3842)65-04-62	Новокузнецк (3843)20-46-81	Саратов (845)249-38-78	Ульяновск (8422)24-23-59
Владивосток (423)249-28-31	Киров (8332)68-02-04	Новосибирск (383)227-86-73	Севастополь (8692)22-31-93	Уфа (347)229-48-12
Волгоград (844)278-03-48	Краснодар (861)203-40-90	Омск (3812)21-46-40	Симферополь (3652)67-13-56	Хабаровск (4212)92-98-04
Вологда (8172)26-41-59	Красноярск (391)204-63-61	Орел (4862)44-53-42	Смоленск (4812)29-41-54	Челябинск (351)202-03-61
Воронеж (473)204-51-73	Курск (4712)77-13-04	Оренбург (3532)37-68-04	Сочи (862)225-72-31	Череповец (8202)49-02-64
Екатеринбург (343)384-55-89	Липецк (4742)52-20-81	Пенза (8412)22-31-16	Ставрополь (8652)20-65-13	Ярославль (4852)69-52-93
Иваново (4932)77-34-06	Киргизия (996)312-96-26-47	Казахстан (772)734-952-31	Таджикистан (992)427-82-92-69	