

Гидропанели ARON BC.06

Технические характеристики

Архангельск (8182)63-90-72	Ижевск (3412)26-03-58	Магнитогорск (3519)55-03-13	Пермь (342)205-81-47	Сургут (3462)77-98-35
Астана (7172)727-132	Иркутск (395)279-98-46	Москва (495)268-04-70	Ростов-на-Дону (863)308-18-15	Тверь (4822)63-31-35
Астрахань (8512)99-46-04	Казань (843)206-01-48	Мурманск (8152)59-64-93	Рязань (4912)46-61-64	Томск (3822)98-41-53
Барнаул (3852)73-04-60	Калининград (4012)72-03-81	Набережные Челны (8552)20-53-41	Самара (846)206-03-16	Тула (4872)74-02-29
Белгород (4722)40-23-64	Калуга (4842)92-23-67	Нижний Новгород (831)429-08-12	Санкт-Петербург (812)309-46-40	Тюмень (3452)66-21-18
Брянск (4832)59-03-52	Кемерово (3842)65-04-62	Новокузнецк (3843)20-46-81	Саратов (845)249-38-78	Ульяновск (8422)24-23-59
Владивосток (423)249-28-31	Киров (8332)68-02-04	Новосибирск (383)227-86-73	Севастополь (8692)22-31-93	Уфа (347)229-48-12
Волгоград (844)278-03-48	Краснодар (861)203-40-90	Омск (3812)21-46-40	Симферополь (3652)67-13-56	Хабаровск (4212)92-98-04
Вологда (8172)26-41-59	Красноярск (391)204-63-61	Орел (4862)44-53-42	Смоленск (4812)29-41-54	Челябинск (351)202-03-61
Воронеж (473)204-51-73	Курск (4712)77-13-04	Оренбург (3532)37-68-04	Сочи (862)225-72-31	Череповец (8202)49-02-64
Екатеринбург (343)384-55-89	Липецк (4742)52-20-81	Пенза (8412)22-31-16	Ставрополь (8652)20-65-13	Ярославль (4852)69-52-93
Иваново (4932)77-34-06	Киргизия (996)312-96-26-47	Казахстан (772)734-952-31	Таджикистан (992)427-82-92-69	

Единый адрес для всех регионов: any@nt-rt.ru || www.aron.nt-rt.ru

BC.06... MODULAR COMPONENTS

BC.06.25/27 P AND T REAR AND SIDE CONNECTORS 3/8" BSP - 2 RODS

BC

Module base

06

CETOP 3/NG6

**

25 = 3/8" BSP rear and side connectors with CMP
27 = 3/8" BSP rear and side connectors without CMP

*

Adjustment (omit for 27 version)
M = Plastic knob
C = Grub screw

*

Setting range (omit for 27 version)
1 = max. 50 bar (**white spring**)
2 = max. 150 bar (**yellow spring**)
3 = max. 320 bar (**green spring**)

00

No variant

1


Serial No.

Weight BC.3.25 : 3 Kg

Weight BC.3.27 : 2,8 Kg



Fixing screws M5x65 UNI 5931

• The minimum permissible setting pressure depending on the spring:
see cartridge valve type CMP.10...

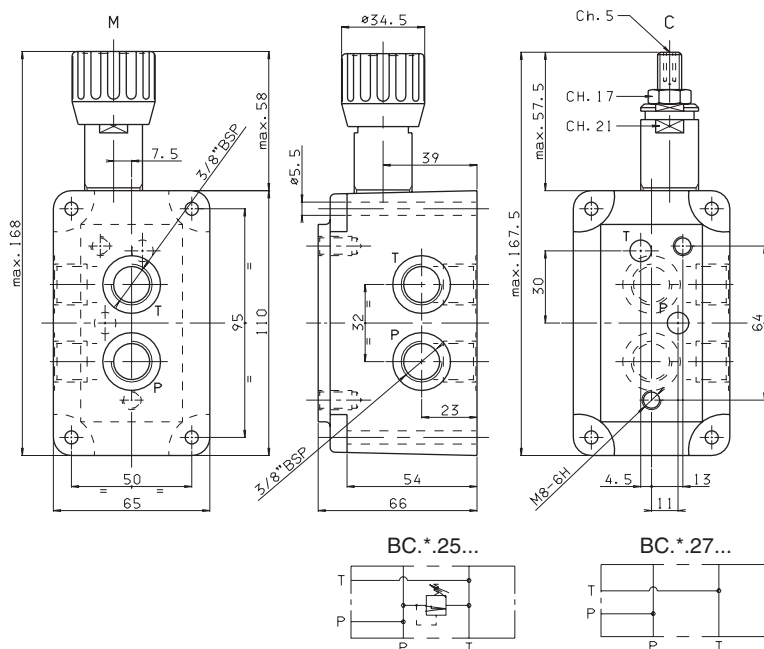

ASSEMBLED MODULAR COMPONENT BASES - 2 RODS

Rods code	L	Composition
BC.06.41/2 M80.20.0001	138	BC.06.25/27 + 2 BC.06.30/32 + BC.06.40
BC.06.41/3 M80.20.0002	187	BC.06.25/27 + 3 BC.06.30/32 + BC.06.40
BC.06.41/4 M80.20.0003	236	BC.06.25/27 + 4 BC.06.30/32 + BC.06.40
BC.06.41/5 M80.20.0004	285	BC.06.25/27 + 5 BC.06.30/32 + BC.06.40
BC.06.41/6 M80.20.0005	334	BC.06.25/27 + 6 BC.06.30/32 + BC.06.40
BC.06.41/7 M80.20.0006	382	BC.06.25/27 + 7 BC.06.30/32 + BC.06.40
BC.06.41/8 M80.20.0007	430	BC.06.25/27 + 8 BC.06.30/32 + BC.06.40
Nuts code	Q26.56.0514	
Pieces	2	

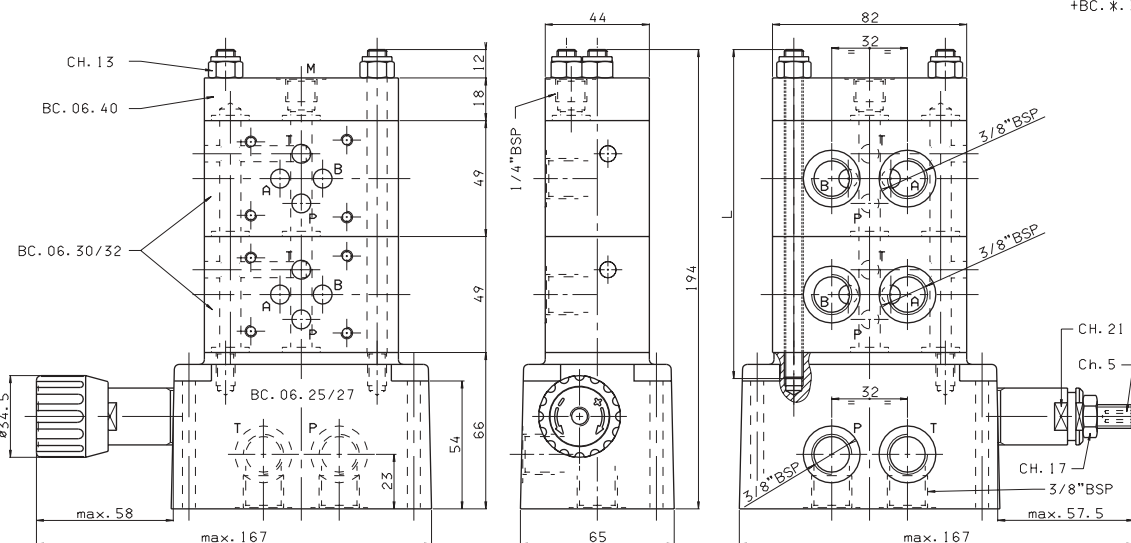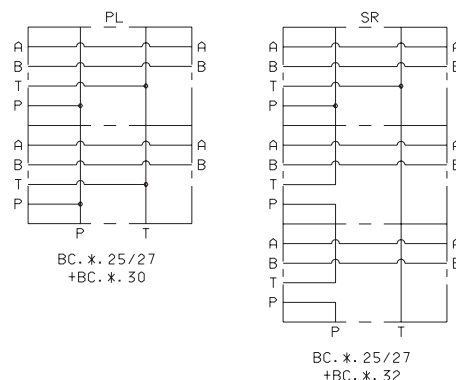

- For series connection the last block high up should be connected in parallel (BC.06.30)
- Single components should be ordered separately
- The minimum permissible setting range depending on the spring: see cartridge valve type CMP.10...

BC.06... MODULAR COMPONENTS

BC.06.30/32 - 2 RODS

BC

Module base

06

CETOP 3/NG6

30 = 3/8" BSP
connectors in parallel
32 = 3/8" BSP
connectors in series



00

No variant


1

Serial No.

Weight: 1,1 Kg

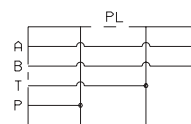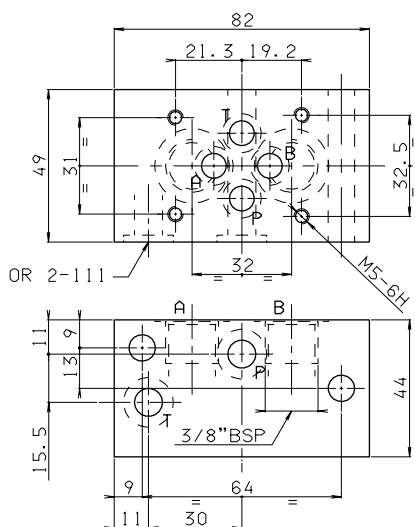

BC.*.30...

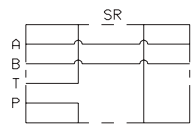

BC.*.32...

BC.06.40 - 2 RODS

BC

Module base

06

CETOP 3/NG6 - 2 rods

40

Blanking



00

No variant

1


Serial No.

Weight: 0,4 Kg

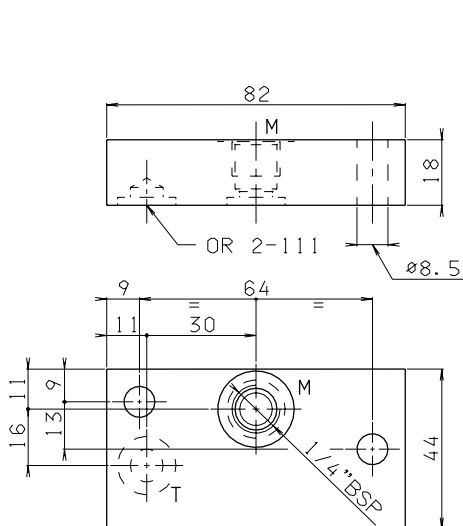

BC.06.41/* RODS FOR MODULAR ASSEMBLY

Rod code	Pieces	L	Composition
BC.06.41/2.00.1	2	138	for 2 solenoid valves
BC.06.41/3.00.1	2	187	for 3 solenoid valves
BC.06.41/4.00.1	2	236	for 4 solenoid valves
BC.06.41/5.00.1	2	285	for 5 solenoid valves
BC.06.41/6.00.1	2	334	for 6 solenoid valves
BC.06.41/7.00.1	2	382	for 7 solenoid valves
BC.06.41/8.00.1	2	430	for 8 solenoid valves

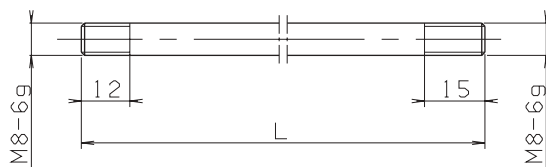

Архангельск (8182)63-90-72	Ижевск (3412)26-03-58	Магнитогорск (3519)55-03-13	Пермь (342)205-81-47	Сургут (3462)77-98-35
Астана (7172)727-132	Иркутск (395)279-98-46	Москва (495)268-04-70	Ростов-на-Дону (863)308-18-15	Тверь (4822)63-31-35
Астрахань (8512)99-46-04	Казань (843)206-01-48	Мурманск (8152)59-64-93	Рязань (4912)46-61-64	Томск (3822)98-41-53
Барнаул (3852)73-04-60	Калининград (4012)72-03-81	Набережные Челны (8552)20-53-41	Самара (846)206-03-16	Тула (4872)74-02-29
Белгород (4722)40-23-64	Калуга (4842)92-23-67	Нижний Новгород (831)429-08-12	Санкт-Петербург (812)309-46-40	Тюмень (3452)66-21-18
Брянск (4832)59-03-52	Кемерово (3842)65-04-62	Новокузнецк (3843)20-46-81	Саратов (845)249-38-78	Ульяновск (8422)24-23-59
Владивосток (423)249-28-31	Киров (8332)68-02-04	Новосибирск (383)227-86-73	Севастополь (8692)22-31-93	Уфа (347)229-48-12
Волгоград (844)278-03-48	Краснодар (861)203-40-90	Омск (3812)21-46-40	Симферополь (3652)67-13-56	Хабаровск (4212)92-98-04
Вологда (8172)26-41-59	Красноярск (391)204-63-61	Орел (4862)44-53-42	Смоленск (4812)29-41-54	Челябинск (351)202-03-61
Воронеж (473)204-51-73	Курск (4712)77-13-04	Оренбург (3532)37-68-04	Сочи (862)225-72-31	Череповец (8202)49-02-64
Екатеринбург (343)384-55-89	Липецк (4742)52-20-81	Пенза (8412)22-31-16	Ставрополь (8652)20-65-13	Ярославль (4852)69-52-93
Иваново (4932)77-34-06	Киргизия (996)312-96-26-47	Казахстан (772)734-952-31	Таджикистан (992)427-82-92-69	