

Гидропанели ARON BM.3

Технические характеристики

Архангельск (8182)63-90-72	Ижевск (3412)26-03-58	Магнитогорск (3519)55-03-13	Пермь (342)205-81-47	Сургут (3462)77-98-35
Астана (7172)727-132	Иркутск (395)279-98-46	Москва (495)268-04-70	Ростов-на-Дону (863)308-18-15	Тверь (4822)63-31-35
Астрахань (8512)99-46-04	Казань (843)206-01-48	Мурманск (8152)59-64-93	Рязань (4912)46-61-64	Томск (3822)98-41-53
Барнаул (3852)73-04-60	Калининград (4012)72-03-81	Набережные Челны (8552)20-53-41	Самара (846)206-03-16	Тула (4872)74-02-29
Белгород (4722)40-23-64	Калуга (4842)92-23-67	Нижний Новгород (831)429-08-12	Санкт-Петербург (812)309-46-40	Тюмень (3452)66-21-18
Брянск (4832)59-03-52	Кемерово (3842)65-04-62	Новокузнецк (3843)20-46-81	Саратов (845)249-38-78	Ульяновск (8422)24-23-59
Владивосток (423)249-28-31	Киров (8332)68-02-04	Новосибирск (383)227-86-73	Севастополь (8692)22-31-93	Уфа (347)229-48-12
Волгоград (844)278-03-48	Краснодар (861)203-40-90	Омск (3812)21-46-40	Симферополь (3652)67-13-56	Хабаровск (4212)92-98-04
Вологда (8172)26-41-59	Красноярск (391)204-63-61	Орел (4862)44-53-42	Смоленск (4812)29-41-54	Челябинск (351)202-03-61
Воронеж (473)204-51-73	Курск (4712)77-13-04	Оренбург (3532)37-68-04	Сочи (862)225-72-31	Череповец (8202)49-02-64
Екатеринбург (343)384-55-89	Липецк (4742)52-20-81	Пенза (8412)22-31-16	Ставрополь (8652)20-65-13	Ярославль (4852)69-52-93
Иваново (4932)77-34-06	Киргизия (996)312-96-26-47	Казахстан (772)734-952-31	Таджикистан (992)427-82-92-69	

Единый адрес для всех регионов: any@nt-rt.ru || www.aron.nt-rt.ru

BM.3... MULTI STATION SUBPLATE

BM.3.**...

BM

Multi station subplate (standard versions are supplied in cast iron material)

3

CETOP 3/NG6

50 = Connected in parallel with pressure relief valve and rear connectors
70 = Connected in parallel with pressure relief valve and side connectors
52 = Connected in series with pressure relief valve and rear connectors
72 = Connected in series with pressure relief valve and side connectors
60 = Connected in parallel without pressure relief valve and side connectors

No. of valve seats
2 / 3 / 4 / 5 / 6 / 7 / 8

Type of adjustment (omit for 60 version)
M = Plastic knob
C = Grub screw

Setting range (omit for 60 version)
1 = max. 50 bar (**white spring**)
2 = max. 150 bar (**yellow spring**)
3 = max. 320 bar (**green spring**)

00 = No variant
AL = in aluminium material versions



1

Serial No.

• The minimum permissible setting pressure depending on the spring:
 see cartridge valve type CMP.10...

BM.3.60 CONNECTED IN PARALLEL WITHOUT PRESSURE RELIEF VALVE



Type	A	B	Weight (Kg)
BM.3.60/2	120	108	3,6
BM.3.60/3	170	158	5,1
BM.3.60/4	220	208	6,7
BM.3.60/5	270	258	8,2
BM.3.60/6	320	308	9,7
BM.3.60/7	370	358	11,2
BM.3.60/8	420	408	12,6

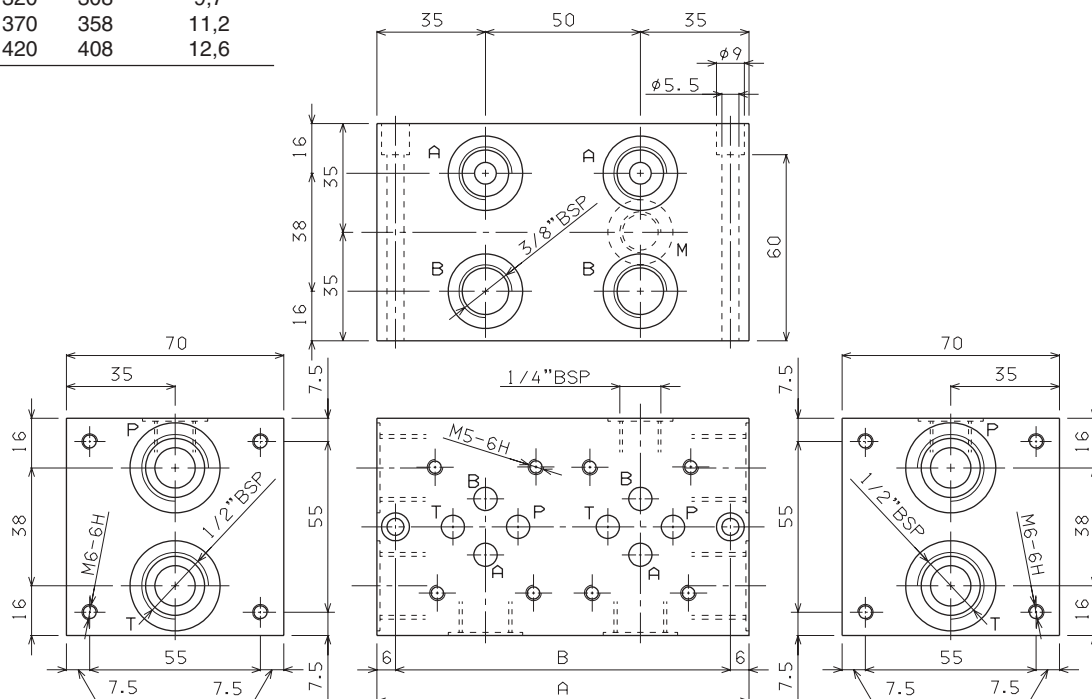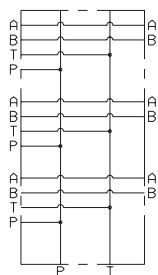




Fixing screws M5x70 UNI 5931

BM.3... MULTI STATION SUBPLATE

BM.3.50 CONNECTED IN PARALLEL WITH PRESSURE RELIEF VALVE

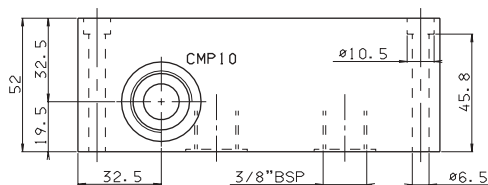
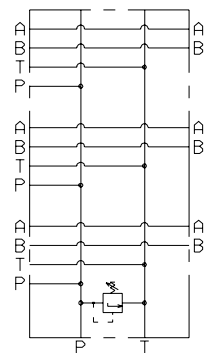


Type	A	B	Weight (Kg)
BM.3.50/2	141	126	4,6
BM.3.50/3	191	176	6,1
BM.3.50/4	241	226	7,6
BM.3.50/5	291	276	9,1
BM.3.50/6	341	326	10,6
BM.3.50/7	391	376	12,1
BM.3.50/8	441	426	13,6


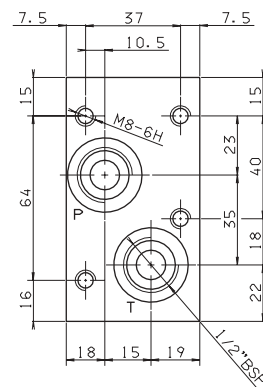
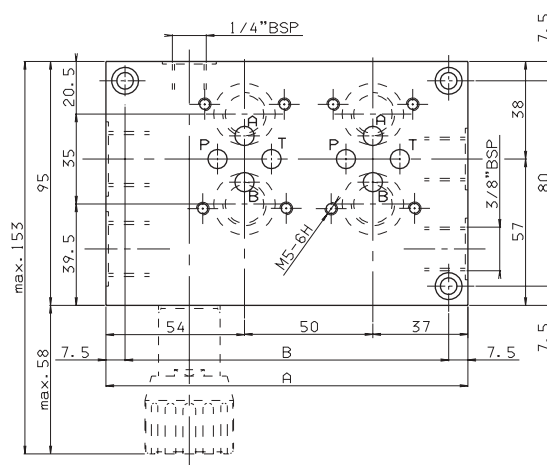
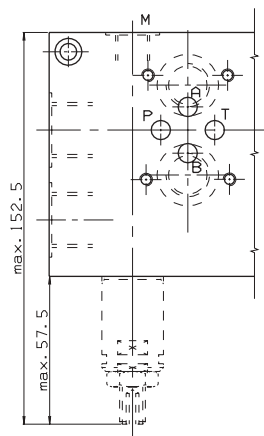


Fixing screws M6x55 UNI 5931

BM.3.70 CONNECTED IN PARALLEL WITH PRESSURE RELIEF VALVE

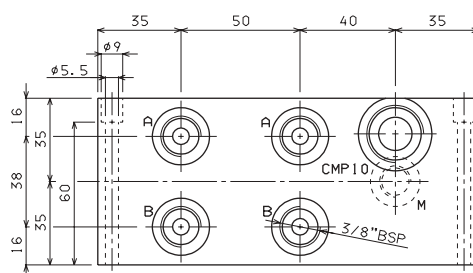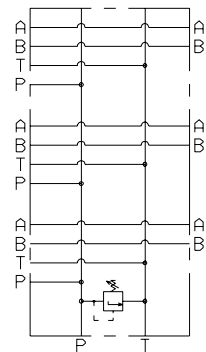



Type	A	B	Weight (Kg)
BM.3.70/2	160	148	4,9
BM.3.70/3	210	198	6,4
BM.3.70/4	260	248	7,9
BM.3.70/5	310	298	9,4
BM.3.70/6	360	348	10,9
BM.3.70/7	410	398	12,4
BM.3.70/8	460	448	13,9

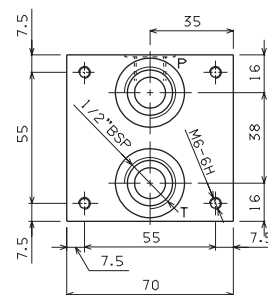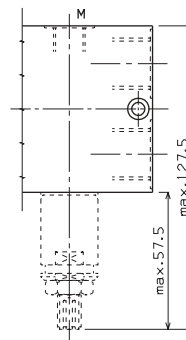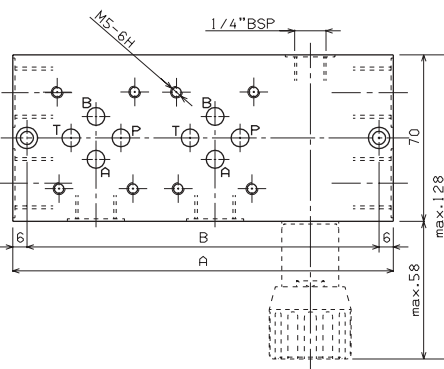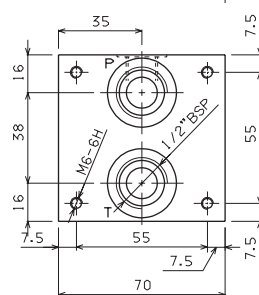

Fixing screws M5x70 UNI 5931

BM.3... MULTI STATION SUBPLATE



BM.3.52 CONNECTED IN SERIES WITH PRESSURE RELIEF VALVE

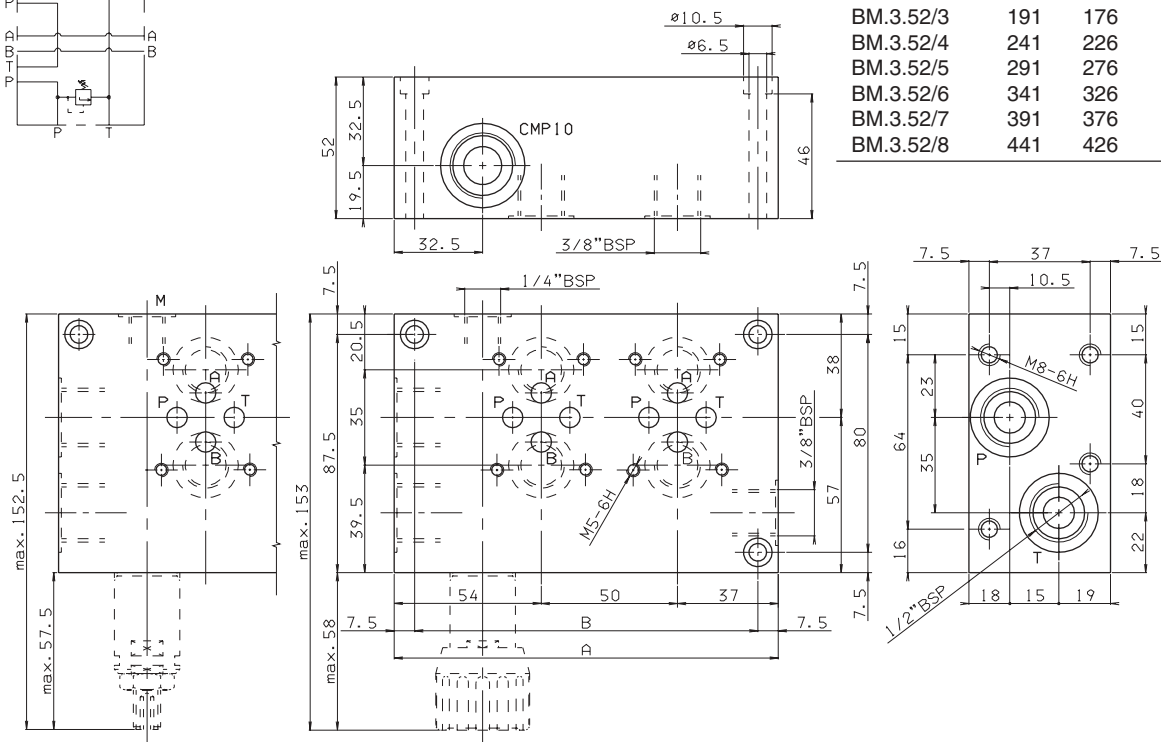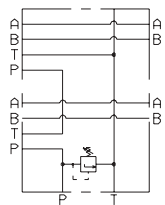

Fixing screws M6x55 UNI 5931

Type	A	B	Weight (Kg)
BM.3.52/2	141	126	4,6
BM.3.52/3	191	176	6,3
BM.3.52/4	241	226	7,6
BM.3.52/5	291	276	9,2
BM.3.52/6	341	326	10,7
BM.3.52/7	391	376	12,2
BM.3.52/8	441	426	13,7

BM.3.72 CONNECTED IN SERIES WITH PRESSURE RELIEF VALVE

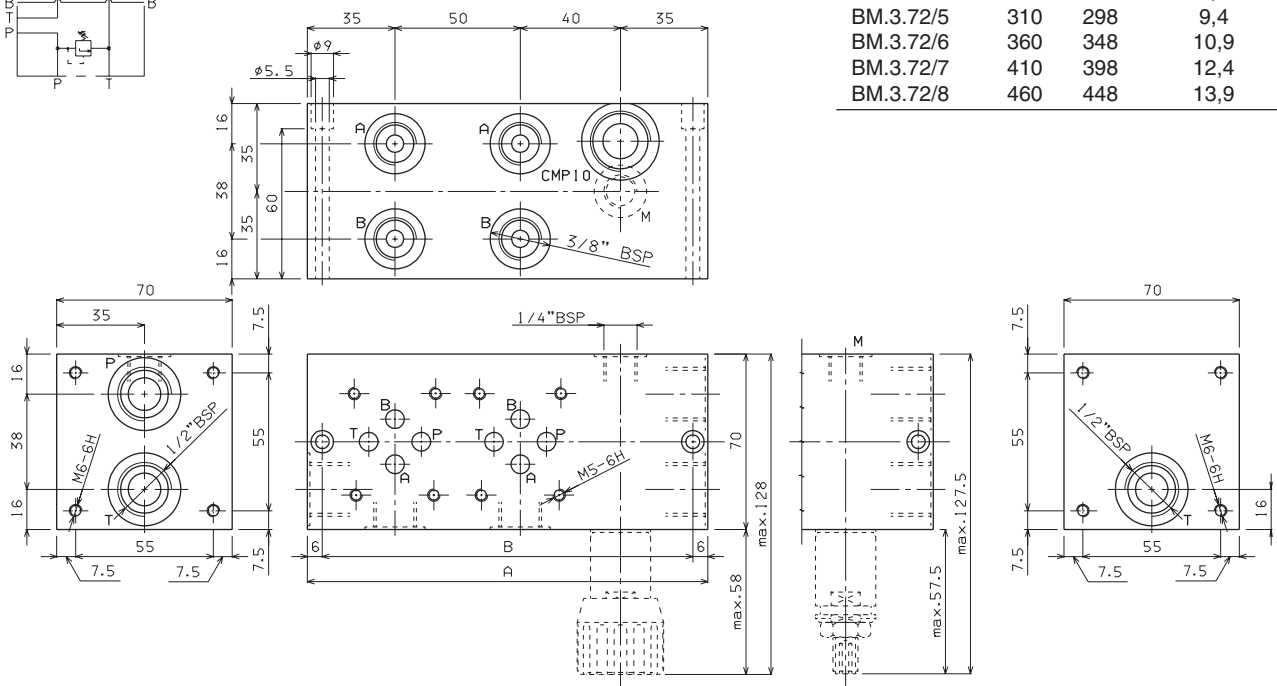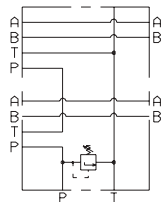

Fixing screws M5x70 UNI 5931

Type	A	B	Weight (Kg)
BM.3.72/2	160	148	4,9
BM.3.72/3	210	198	6,4
BM.3.72/4	260	248	7,9
BM.3.72/5	310	298	9,4
BM.3.72/6	360	348	10,9
BM.3.72/7	410	398	12,4
BM.3.72/8	460	448	13,9

Архангельск (8182)63-90-72	Ижевск (3412)26-03-58	Магнитогорск (3519)55-03-13	Пермь (342)205-81-47	Сургут (3462)77-98-35
Астана (7172)727-132	Иркутск (395)279-98-46	Москва (495)268-04-70	Ростов-на-Дону (863)308-18-15	Тверь (4822)63-31-35
Астрахань (8512)99-46-04	Казань (843)206-01-48	Мурманск (8152)59-64-93	Рязань (4912)46-61-64	Томск (3822)98-41-53
Барнаул (3852)73-04-60	Калининград (4012)72-03-81	Набережные Челны (8552)20-53-41	Самара (846)206-03-16	Тула (4872)74-02-29
Белгород (4722)40-23-64	Калуга (4842)92-23-67	Нижний Новгород (831)429-08-12	Санкт-Петербург (812)309-46-40	Тюмень (3452)66-21-18
Брянск (4832)59-03-52	Кемерово (3842)65-04-62	Новокузнецк (3843)20-46-81	Саратов (845)249-38-78	Ульяновск (8422)24-23-59
Владивосток (423)249-28-31	Киров (8332)68-02-04	Новосибирск (383)227-86-73	Севастополь (8692)22-31-93	Уфа (347)229-48-12
Волгоград (844)278-03-48	Краснодар (861)203-40-90	Омск (3812)21-46-40	Симферополь (3652)67-13-56	Хабаровск (4212)92-98-04
Вологда (8172)26-41-59	Красноярск (391)204-63-61	Орел (4862)44-53-42	Смоленск (4812)29-41-54	Челябинск (351)202-03-61
Воронеж (473)204-51-73	Курск (4712)77-13-04	Оренбург (3532)37-68-04	Сочи (862)225-72-31	Череповец (8202)49-02-64
Екатеринбург (343)384-55-89	Липецк (4742)52-20-81	Пенза (8412)22-31-16	Ставрополь (8652)20-65-13	Ярославль (4852)69-52-93
Иваново (4932)77-34-06	Киргизия (996)312-96-26-47	Казахстан (772)734-952-31	Таджикистан (992)427-82-92-69	