

Гидропанели ARON BS.3

Технические характеристики

Архангельск (8182)63-90-72	Ижевск (3412)26-03-58	Магнитогорск (3519)55-03-13	Пермь (342)205-81-47	Сургут (3462)77-98-35
Астана (7172)727-132	Иркутск (395)279-98-46	Москва (495)268-04-70	Ростов-на-Дону (863)308-18-15	Тверь (4822)63-31-35
Астрахань (8512)99-46-04	Казань (843)206-01-48	Мурманск (8152)59-64-93	Рязань (4912)46-61-64	Томск (3822)98-41-53
Барнаул (3852)73-04-60	Калининград (4012)72-03-81	Набережные Челны (8552)20-53-41	Самара (846)206-03-16	Тула (4872)74-02-29
Белгород (4722)40-23-64	Калуга (4842)92-23-67	Нижний Новгород (831)429-08-12	Санкт-Петербург (812)309-46-40	Тюмень (3452)66-21-18
Брянск (4832)59-03-52	Кемерово (3842)65-04-62	Новокузнецк (3843)20-46-81	Саратов (845)249-38-78	Ульяновск (8422)24-23-59
Владивосток (423)249-28-31	Киров (8332)68-02-04	Новосибирск (383)227-86-73	Севастополь (8692)22-31-93	Уфа (347)229-48-12
Волгоград (844)278-03-48	Краснодар (861)203-40-90	Омск (3812)21-46-40	Симферополь (3652)67-13-56	Хабаровск (4212)92-98-04
Вологда (8172)26-41-59	Красноярск (391)204-63-61	Орел (4862)44-53-42	Смоленск (4812)29-41-54	Челябинск (351)202-03-61
Воронеж (473)204-51-73	Курск (4712)77-13-04	Оренбург (3532)37-68-04	Сочи (862)225-72-31	Череповец (8202)49-02-64
Екатеринбург (343)384-55-89	Липецк (4742)52-20-81	Пенза (8412)22-31-16	Ставрополь (8652)20-65-13	Ярославль (4852)69-52-93
Иваново (4932)77-34-06	Киргизия (996)312-96-26-47	Казахстан (772)734-952-31	Таджикистан (992)427-82-92-69	

Единый адрес для всех регионов: any@nt-rt.ru || www.aron.nt-rt.ru



CETOP 3 SUBPLATES

BS.3.01... / BS.3.0*...

CH. VII PAGE 7

BS.3.10/11... / BS.3.12/13...

BS.3.14/15... / BS.3.16/17...

CH. VII PAGE 8

BS.3.20/21... / BS.VMP.10...

BS.3.W... CH. VII PAGE 9

BC.3.25/27... / BC.3.30/32...

BC.3.40... CH. VII PAGE 10

BC.3.41/*...

CH. VII PAGE 11

BC.3.50... / BC.3.51...

BC.3.07... / BC.3.107...

CH. VII PAGE 12

BC.3.08... / BC.3.09...

BC.06.XQ3... / BC.06.XQP3...

CH. VII PAGE 13

BC.06.25/27...

CAP. VII PAGE 14

BC.06.30/32... / BC.06.40...

BC.06.41/*... CH. VII PAGE 15

BM.3.**... / BM.3.60...

CH. VII PAGE 16

BM.3.50... / BM.3.70...

CH. VII PAGE 17

BM.3.52... / BM.3.72...

CH. VII PAGE 18

CMP.10...

CH. V PAGE 19

XQ.3...

CH. VIII PAGE 12

XQP.3...

CH. VIII PAGE 14

BS.3... SINGLE STATION SUBPLATE

BS.3.01...

BS

Single subplate (blanking)

3

CETOP 3/NG6

01

P / T / A / B closed

00

No variant

1




Serial No.

Weight: 0,2 Kg

Fixing screws

M5x14 UNI 5931

K = plate OR (Q25.95.0001)

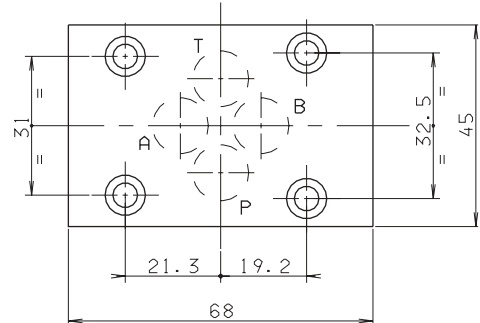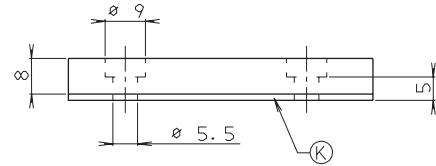

BS.3.** ...

BS

Single subplate (blanking)

3

CETOP 3/NG6











02/03/04/05/06/07/08/09

00

No variant

1

Serial No.

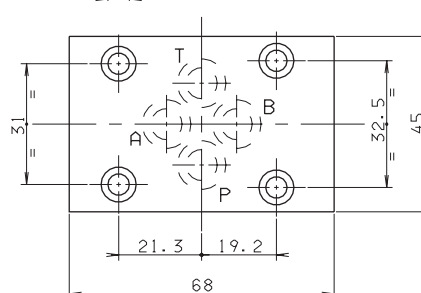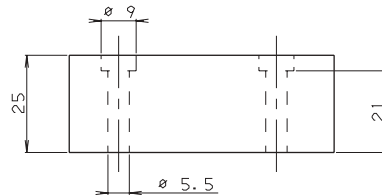


Weight: 0,5 Kg

Fixing screws M5x30 UNI 5931

BS.3... SINGLE STATION SUBPLATE

BS.3.10/11... (REAR CONNECTORS)


- BS** Single subplate
- 3** CETOP 3/NG6
- **** 10 = 1/8" BSP rear connectors
11 = 1/4" BSP rear connectors
- 00** No variant
- 1** Serial No.

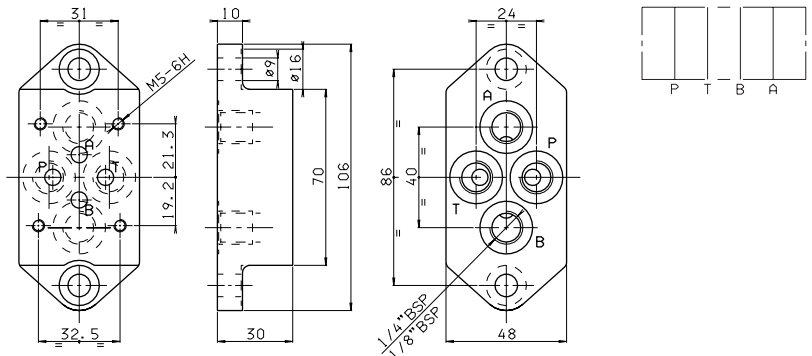

Weight: 0,7 Kg - Fixing screws M8x20 UNI 5931

BS.3.12/13 (REAR CONNECTORS)


- BS** Single subplate
- 3** CETOP 3/NG6
- **** 12 = 3/8" BSP rear connectors
13 = 1/4" BSP rear connectors
- 00** No variant
- 1** Serial No.

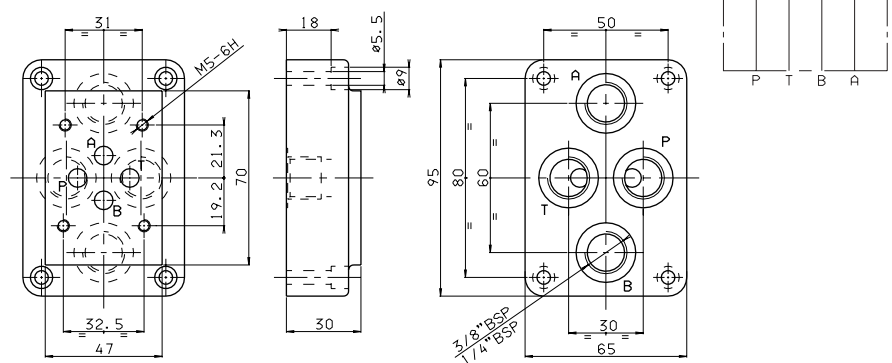

Weight: 1 Kg - Fixing screws M5x25 UNI 5931

BS.3.14/15 (SIDE CONNECTORS)


- BS** Single subplate
- 3** CETOP 3/NG6
- **** 14 = 3/8" BSP side connectors
15 = 1/4" BSP side connectors
- 00** No variant
- 1** Serial No.

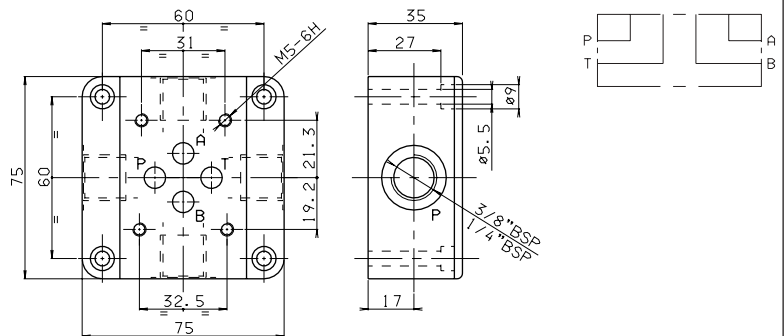

Weight: 1,2 Kg - Fixing screws M5x35 UNI 5931

BS.3.16/17 (CONNECTORS SIDE A AND B, REAR P AND T)

- BS** Single subplate
- 3** CETOP 3/NG6
- **** 16 = 3/8" BSP rear and side connectors
17 = 1/4" BSP rear and side connectors
- 00** No variant
- 1** Serial No.

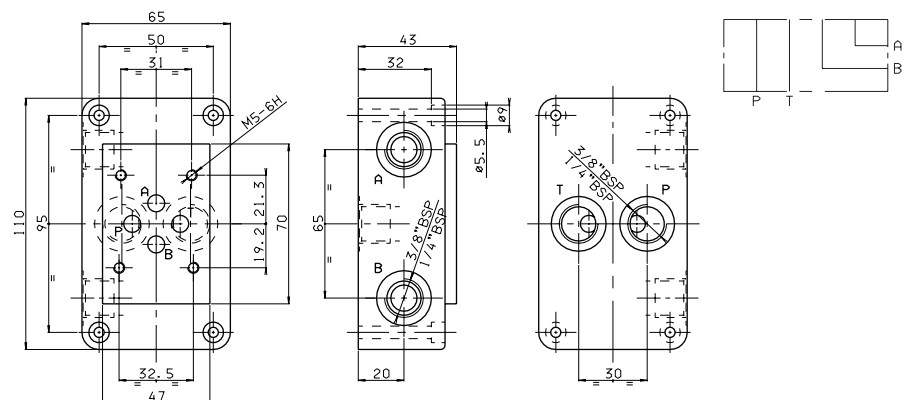

Weight: 1,8 Kg - Fixing screws M5x40 UNI 5931

BS.3... SINGLE STATION SUBPLATE

BS.3.20/21 (CONNECTORS SIDE A AND B, REAR P AND T)

BS Single subplate

3 CETOP 3/NG6

** 20 = 3/8" BSP rear and side connectors
21 = 1/4" BSP rear and side connectors


* M = Plastic knob
C = Grub screws

* Setting range
1 = max. 50 bar (white spring)
2 = max. 150 bar (yellow spring)
3 = max. 320 bar (green spring)

00 No variant

1 Serial No.


Weight: 2,9 Kg - Fixing screws M5x65 UNI 5931

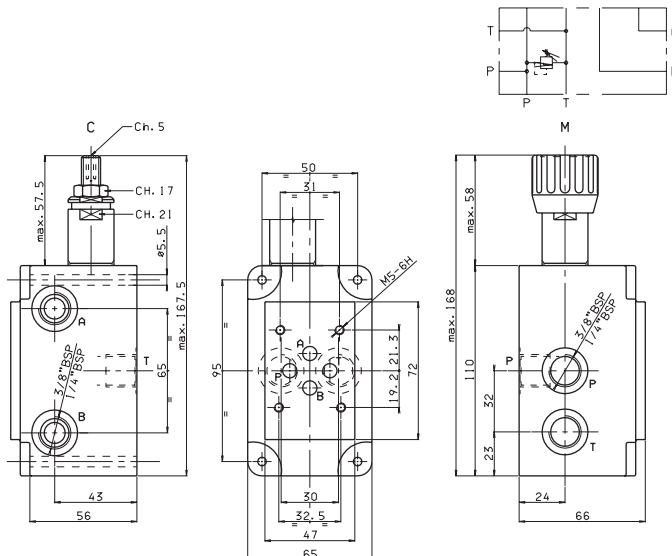

BS.VMP.10 SINGLE STATION SUBPLATE WITH MAX. PRESSURE VALVE FOR SURFACE MOUNTING (E.G. ON TAKE COVER)

BS	Single subplate
VMP	Max. pressure valve
10	3/8" BSP connectors
*	M = Plastic knob C = Grub screw V = Handwheel
*	Setting range 1 = max. 60 bar (white spring) 2 = max. 150 bar (yellow spring) 3 = max. 320 bar (green spring)
00	No variant
1	Serial No.

Weight: 1,6 Kg
Fixing screws M5x60 UNI 5931

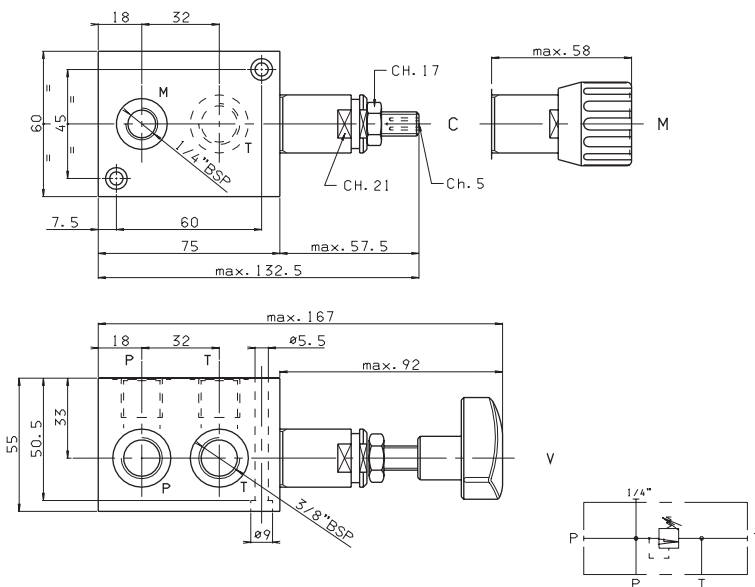


- The minimum permissible setting pressure depending on the spring:
see cartridge valve type CMP.10...

BS.3.W...

BS	Single subplate
3	CETOP 3/NG6
W	Wheatstone bridge
00	No variant
1	Serial No.

Weight: 1,8 Kg
Fixing screws M5x45 UNI 5931

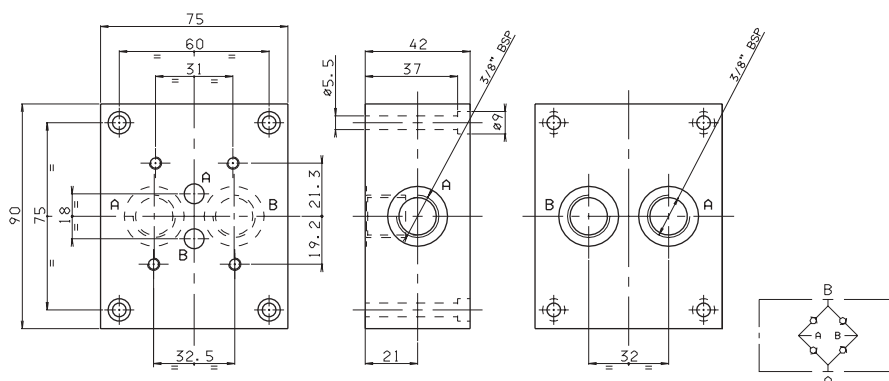

Архангельск (8182)63-90-72	Ижевск (3412)26-03-58	Магнитогорск (3519)55-03-13	Пермь (342)205-81-47	Сургут (3462)77-98-35
Астана (7172)727-132	Иркутск (395)279-98-46	Москва (495)268-04-70	Ростов-на-Дону (863)308-18-15	Тверь (4822)63-31-35
Астрахань (8512)99-46-04	Казань (843)206-01-48	Мурманск (8152)59-64-93	Рязань (4912)46-61-64	Томск (3822)98-41-53
Барнаул (3852)73-04-60	Калининград (4012)72-03-81	Набережные Челны (8552)20-53-41	Самара (846)206-03-16	Тула (4872)74-02-29
Белгород (4722)40-23-64	Калуга (4842)92-23-67	Нижний Новгород (831)429-08-12	Санкт-Петербург (812)309-46-40	Тюмень (3452)66-21-18
Брянск (4832)59-03-52	Кемерово (3842)65-04-62	Новокузнецк (3843)20-46-81	Саратов (845)249-38-78	Ульяновск (8422)24-23-59
Владивосток (423)249-28-31	Киров (8332)68-02-04	Новосибирск (383)227-86-73	Севастополь (8692)22-31-93	Уфа (347)229-48-12
Волгоград (844)278-03-48	Краснодар (861)203-40-90	Омск (3812)21-46-40	Симферополь (3652)67-13-56	Хабаровск (4212)92-98-04
Вологда (8172)26-41-59	Красноярск (391)204-63-61	Орел (4862)44-53-42	Смоленск (4812)29-41-54	Челябинск (351)202-03-61
Воронеж (473)204-51-73	Курск (4712)77-13-04	Оренбург (3532)37-68-04	Сочи (862)225-72-31	Череповец (8202)49-02-64
Екатеринбург (343)384-55-89	Липецк (4742)52-20-81	Пенза (8412)22-31-16	Ставрополь (8652)20-65-13	Ярославль (4852)69-52-93
Иваново (4932)77-34-06	Киргизия (996)312-96-26-47	Казахстан (772)734-952-31	Таджикистан (992)427-82-92-69	