

Гидропанели ARON BS.5

Технические характеристики

Архангельск (8182)63-90-72	Ижевск (3412)26-03-58	Магнитогорск (3519)55-03-13	Пермь (342)205-81-47	Сургут (3462)77-98-35
Астана (7172)727-132	Иркутск (395)279-98-46	Москва (495)268-04-70	Ростов-на-Дону (863)308-18-15	Тверь (4822)63-31-35
Астрахань (8512)99-46-04	Казань (843)206-01-48	Мурманск (8152)59-64-93	Рязань (4912)46-61-64	Томск (3822)98-41-53
Барнаул (3852)73-04-60	Калининград (4012)72-03-81	Набережные Челны (8552)20-53-41	Самара (846)206-03-16	Тула (4872)74-02-29
Белгород (4722)40-23-64	Калуга (4842)92-23-67	Нижний Новгород (831)429-08-12	Санкт-Петербург (812)309-46-40	Тюмень (3452)66-21-18
Брянск (4832)59-03-52	Кемерово (3842)65-04-62	Новокузнецк (3843)20-46-81	Саратов (845)249-38-78	Ульяновск (8422)24-23-59
Владивосток (423)249-28-31	Киров (8332)68-02-04	Новосибирск (383)227-86-73	Севастополь (8692)22-31-93	Уфа (347)229-48-12
Волгоград (844)278-03-48	Краснодар (861)203-40-90	Омск (3812)21-46-40	Симферополь (3652)67-13-56	Хабаровск (4212)92-98-04
Вологда (8172)26-41-59	Красноярск (391)204-63-61	Орел (4862)44-53-42	Смоленск (4812)29-41-54	Челябинск (351)202-03-61
Воронеж (473)204-51-73	Курск (4712)77-13-04	Оренбург (3532)37-68-04	Сочи (862)225-72-31	Череповец (8202)49-02-64
Екатеринбург (343)384-55-89	Липецк (4742)52-20-81	Пенза (8412)22-31-16	Ставрополь (8652)20-65-13	Ярославль (4852)69-52-93
Иваново (4932)77-34-06	Киргизия (996)312-96-26-47	Казахстан (772)734-952-31	Таджикистан (992)427-82-92-69	

Единый адрес для всех регионов: any@nt-rt.ru || www.aron.nt-rt.ru



CETOP 5 SUBPLATES

BS.5.01 / BS.5.0* CH. VII PAGE 19

BS.5.12... / BS.5.13...

BS.5.14... / BS.5.15...
CH. VII PAGE 20

BS.5.16... / BS.5.17...

BS.5.3... CH. VII PAGE 21

BS.5.30/31... CH. VII PAGE 22

BS.VMP.20... / BS.5.29...
CH. VII PAGE 23

BC.5.36/28... CH. VII PAGE 24

BC.5.41/*... / BC.5.40...
CH. VII PAGE 25

BC.5.30/32... / BC.5.50... / BC.5.51...
CH. VII PAGE 26

BC.5.07... / BC.5.107...
BC.5.3A... / BC.10.06...
CH. VII PAGE 27

BM.5.**... / BM.5.50...
CH. VII PAGE 28

BM.5.60... / BM.5.70...
BM.5.80... CH. VII PAGE 29

CMP.20... CH. V PAGE 20

CMP.30... CH. V PAGE 21

BS.5... SINGLE STATION SUBPLATE

BS.5.01...

BS

Single subplate (blanking)

5

CETOP 5/NG10

01


P/T/A/B closed

00


No variant

1

Serial No.



•Pay attention please, use these subplate in applications at slow pressure (P max. 150 bar dynamic)

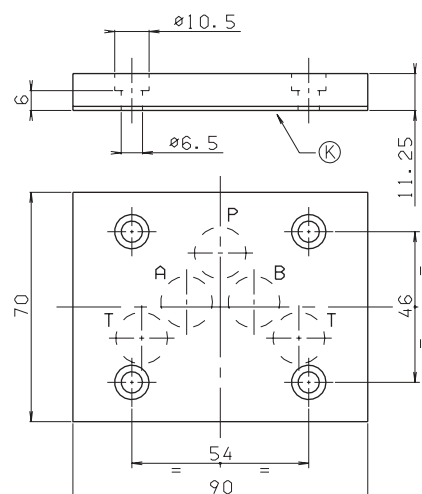

Weight: 0,5 Kg

Fixing screws

M6x15 UNI 5931

K = plate OR (Q25.95.0002)

BS.5.**...

BS

Single subplate (blanking)

5

CETOP 5/NG10


02/03/04/05/06/07/08/09

00

No variant









1

Serial No.

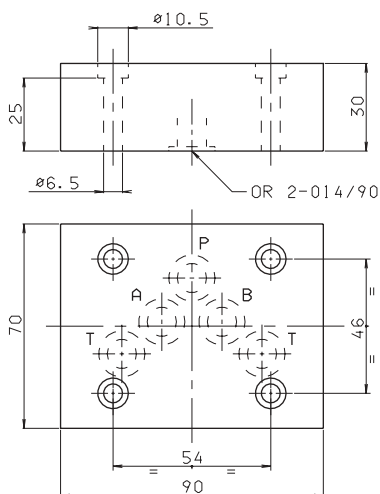

Weight: 1,2 Kg


Fixing screws M6x35 UNI 5931



BS.5... SINGLE STATION SUBPLATE

BS.5.12 (REAR CONNECTORS)


- BS** Single subplate
- 5** CETOP 5/NG10
- 12** 1/2" BSP rear connectors
- 00** No variant
- 1** Serial No.

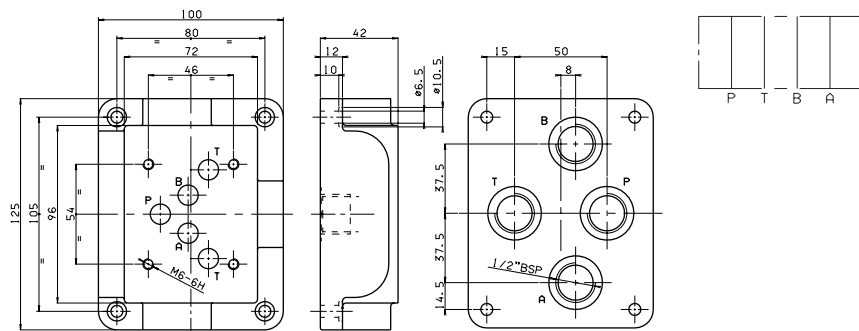

Weight: 2,7 Kg - Fixing screws M6x25 UNI 5931

BS.5.13 (REAR CONNECTORS)


- BS** Single subplate
- 5** CETOP 5/NG10
- 13** 3/4" BSP rear connectors
- 00** No variant
- 1** Serial No.

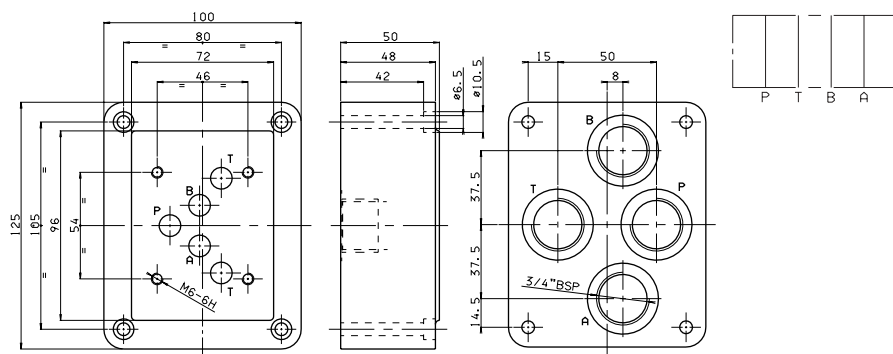

Weight: 3,8 Kg - Fixing screws M6x50 UNI 5931

BS.5.14 (SIDE CONNECTORS)


- BS** Single subplate
- 5** CETOP 5/NG10
- 14** 1/2" BSP side connectors
- 00** No variant
- 1** Serial No.

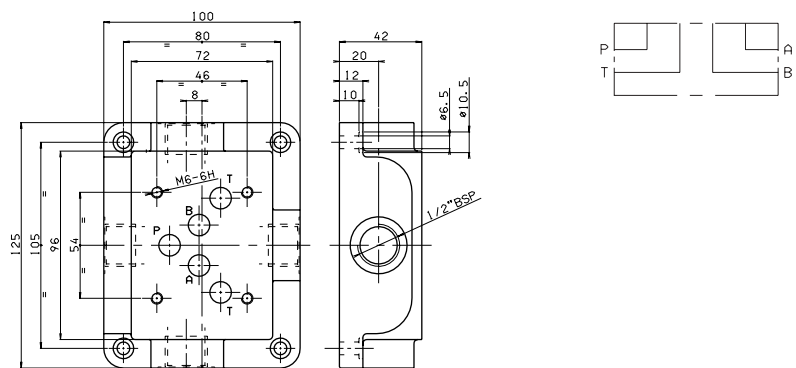

Weight: 2,6 Kg - Fixing screws M6x20 UNI 5931

BS.5.15 (SIDE CONNECTORS)

- BS** Single subplate
- 5** CETOP 5/NG10
- 15** 3/4" BSP side connectors
- 00** No variant
- 1** Serial No.

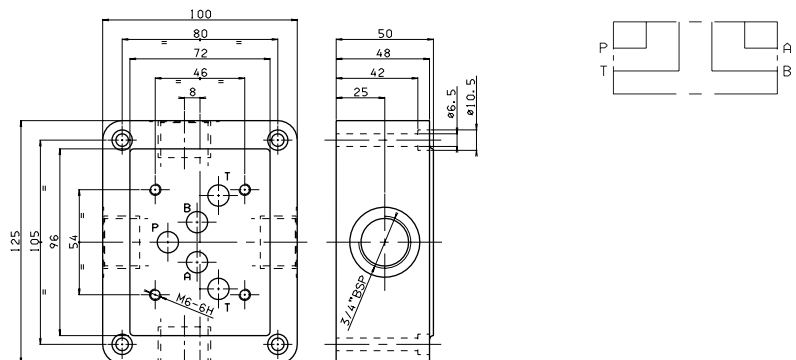

Weight: 3,8 Kg - Fixing screws M6x50 UNI 5931


BS.5... SINGLE STATION SUBPLATE

BS.5.16 (CONNECTORS SIDE A AND B, REAR P AND T)

- BS** Single subplate
- 5** CETOP 5/NG10
- 16** 1/2" BSP rear and side connectors
- 00** No variant
- 1** Serial No.

Weight: 2,6 Kg

Fixing screws M6x20 UNI 5931

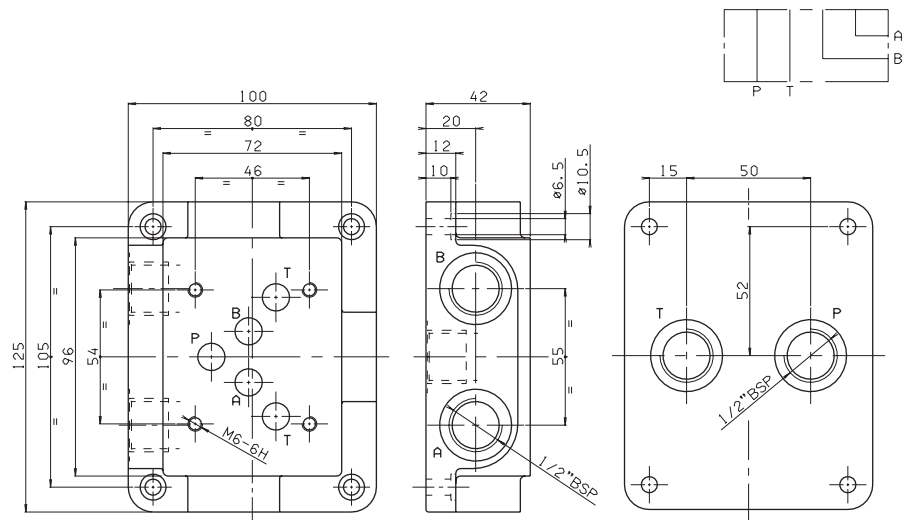


BS.5.17 (CONNECTORS SIDE A AND B, REAR P AND T)

- BS** Single subplate
- 5** CETOP 5/NG10
- 17** 3/4" BSP rear and side connectors
- 00** No variant
- 1** Serial No.

Weight: 3,9 Kg

Fixing screws M6x50 UNI 5931

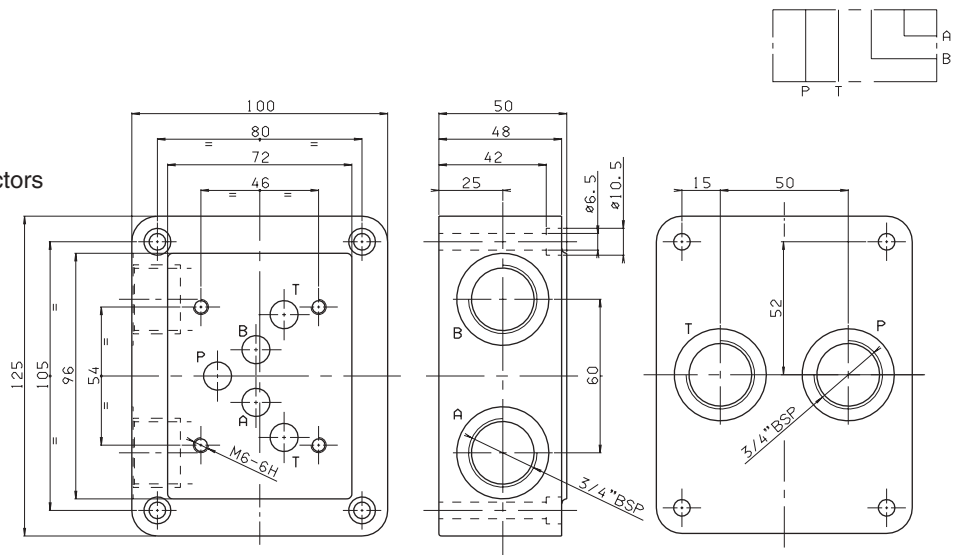


BS.5.3 (REDUCTION PLATE FROM CETOP 5/NG10 TO CETOP 3/NG6)

- BS** Single subplate
- 5** CETOP 5/NG10
- 3** CETOP 3/NG6
- 00** No variant
- 1** Serial No.

Weight: 1,1 Kg

Fixing screws M6x30 UNI 5931

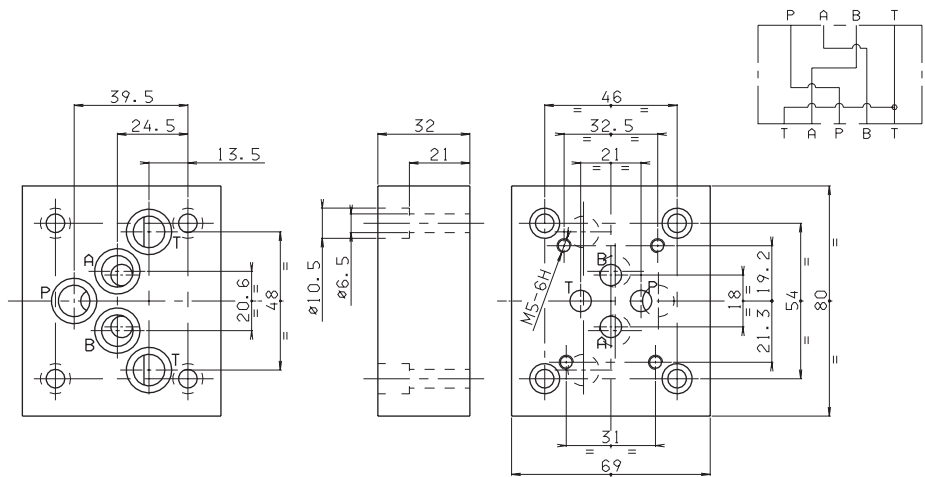

BS.5... SINGLE STATION SUBPLATE

BS.5.30/31

BS

Single subplate

5

CETOP 5/NG10

30 = Connectors A and B side, P and T rear (all 3/4" BSP)

31 = Connectors A and B side, P and T rear (all 3/4" BSP)

M = Plastic knob

C = Grub screw

Setting range

1 = max. 50 bar (**white spring**)

2 = max. 140 bar (**yellow spring**)


3 = max. 350 bar (**green spring**)

00


No variant

1

Serial No.

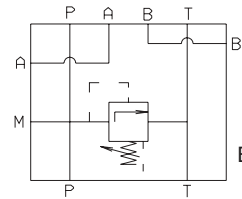


BS.5.30...

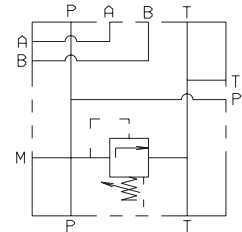

BS.5.31...


• The minimum permissible setting pressure depending on the spring:
see cartridge valve type CMP.30...

BS.5.30 (CONNECTORS A AND B SIDE, P AND T REAR)

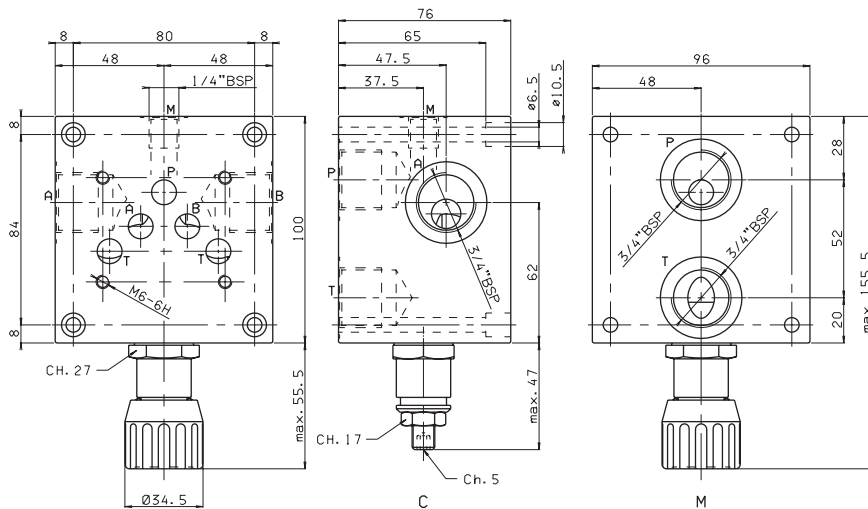

Weight: 5,5 Kg
Fixing screws
M6x75 UNI 5931

BS.5.31 (CONNECTORS A AND B SIDE, P AND T SIDE AND REAR)

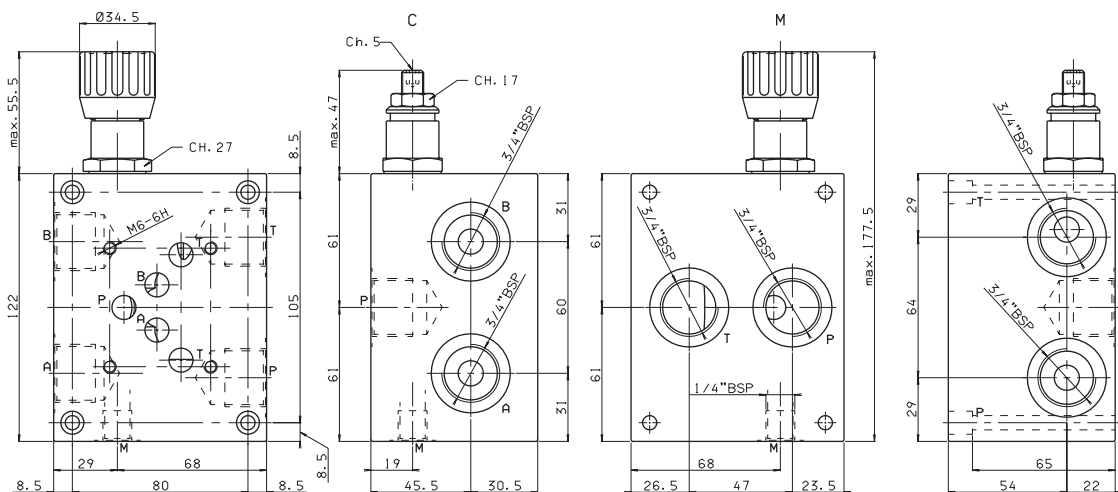


Weight: 6,7 Kg - Fixing screws M6x75 UNI 5931

BS.5... SINGLE STATION SUBPLATE

BS.VMP.20 SINGLE STATION SUBPLATE WITH MAX. PRESSURE VALVE FOR SURFACE MOUNTING (E.G. ON TANK COVER)

BS	Single subplate
VMP	Max. pressure valve
20	1/2" BSP connectors
*	M = Plastic knob C = Grub screw V = Handwheel
*	Setting range 1 = max. 50 bar (white spring) 2 = max. 140 bar (yellow spring) 3 = max. 250 bar (green spring)
00	No variant
1	Serial No.

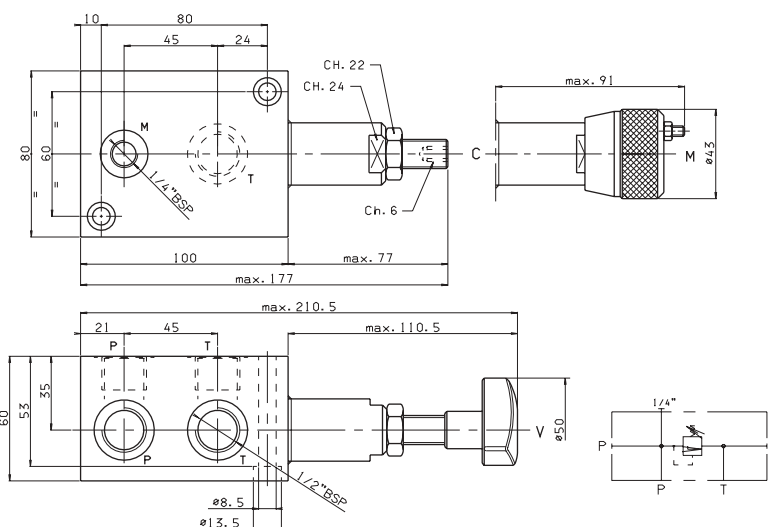


Weight: 3,1 Kg
Fixing screws M8x65 UNI 5931

- The minimum permissible setting pressure depending on the spring:
see cartridge valve type CMP.20...

BS.5.29 SINGLE STATION SUBPLATE WITH MAX. PRESSURE VALVE FOR AD.5.1...

BS	Single subplate
5	CETOP 5/NG10
29	1/2" BSP - P rear connector 1/2" BSP - A and B side connectors 1/2" BSP - T rear connector 3/4" BSP - T side connector
C	Type of adjustment Grub screw 
*	Setting range 2 = max. 150 bar (yellow spring) 3 = max. 320 bar (green spring)
00	No variant
1	Serial No.

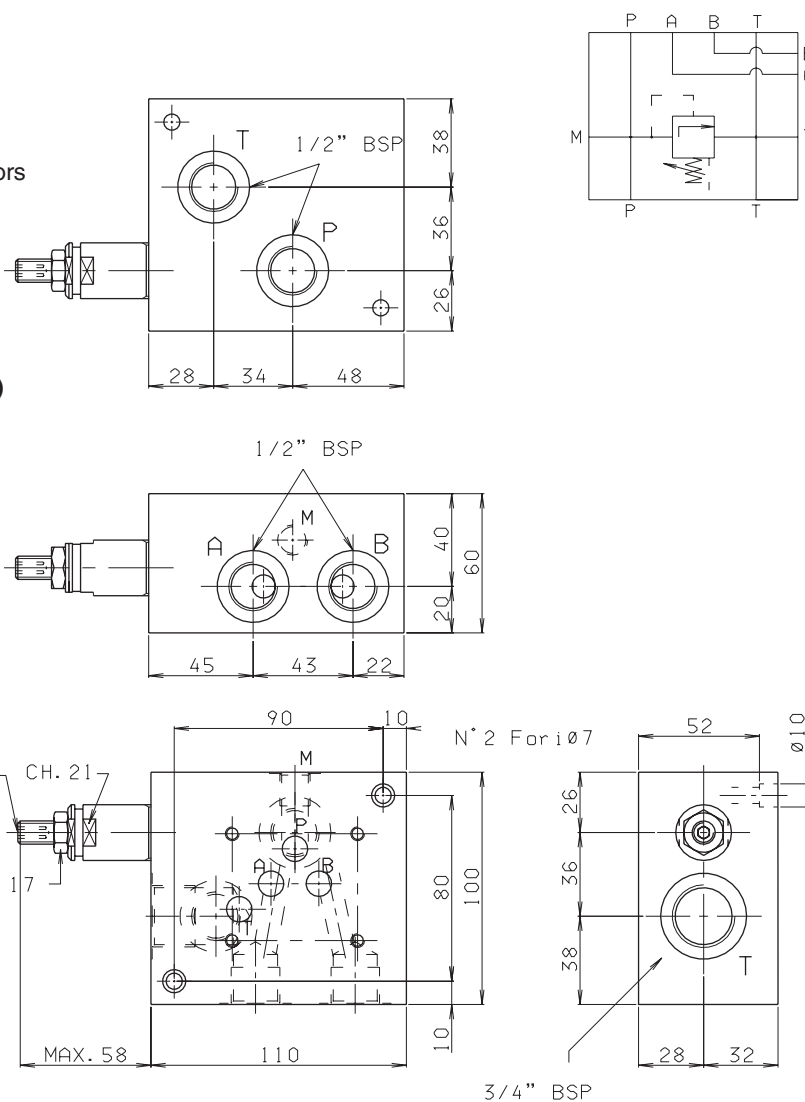

Weight: 4,5 Kg
Fixing screws M6x60 UNI 5931

Tightening torque CMP.10...
60 ÷ 70 Nm / 6 ÷ 7 Kgm

M = Manometer connector (1/4" BSP)

Архангельск (8182)63-90-72	Ижевск (3412)26-03-58	Магнитогорск (3519)55-03-13	Пермь (342)205-81-47	Сургут (3462)77-98-35
Астана (7172)727-132	Иркутск (395)279-98-46	Москва (495)268-04-70	Ростов-на-Дону (863)308-18-15	Тверь (4822)63-31-35
Астрахань (8512)99-46-04	Казань (843)206-01-48	Мурманск (8152)59-64-93	Рязань (4912)46-61-64	Томск (3822)98-41-53
Барнаул (3852)73-04-60	Калининград (4012)72-03-81	Набережные Челны (8552)20-53-41	Самара (846)206-03-16	Тула (4872)74-02-29
Белгород (4722)40-23-64	Калуга (4842)92-23-67	Нижний Новгород (831)429-08-12	Санкт-Петербург (812)309-46-40	Тюмень (3452)66-21-18
Брянск (4832)59-03-52	Кемерово (3842)65-04-62	Новокузнецк (3843)20-46-81	Саратов (845)249-38-78	Ульяновск (8422)24-23-59
Владивосток (423)249-28-31	Киров (8332)68-02-04	Новосибирск (383)227-86-73	Севастополь (8692)22-31-93	Уфа (347)229-48-12
Волгоград (844)278-03-48	Краснодар (861)203-40-90	Омск (3812)21-46-40	Симферополь (3652)67-13-56	Хабаровск (4212)92-98-04
Вологда (8172)26-41-59	Красноярск (391)204-63-61	Орел (4862)44-53-42	Смоленск (4812)29-41-54	Челябинск (351)202-03-61
Воронеж (473)204-51-73	Курск (4712)77-13-04	Оренбург (3532)37-68-04	Сочи (862)225-72-31	Череповец (8202)49-02-64
Екатеринбург (343)384-55-89	Липецк (4742)52-20-81	Пенза (8412)22-31-16	Ставрополь (8652)20-65-13	Ярославль (4852)69-52-93
Иваново (4932)77-34-06	Киргизия (996)312-96-26-47	Казахстан (772)734-952-31	Таджикистан (992)427-82-92-69	